



Tassenwärmer S / Cup warmer S

Bedienungsanleitung Tassenwärmer

Cup warmer Instructions for Use

Mode d'emploi du chauffe-tasses

Istruzioni per l'uso scaldatasse

Gebruiksaanwijzing kopjeswarmer

Modo de empleo para calentador de tazas

Manual de instruções do dispositivo de aquecimento de chávenas

Bruksanvisning koppvärmare

Instruksjonsbok koppvarmer

Instrukcja obsługi podgrzewacza do filiżanek

Руководство по эксплуатации подогревателя чашек

Návod k obsluze ohřívače šálků

IMPORTANT SAFEGUARDS

Follow the basic safety precautions

When using electrical appliances, basic safety precautions should always be followed, to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- To protect against fire, electric shock and injury to persons, do not immerse cord, plugs, or body of machine in water or other liquid.
- Do not touch hot surfaces. Use handles or knobs.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to »off«, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- For household use only.

Special cord set instructions

- a. A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a long cord.
- b. Longer extension cords are available and may be used if care is exercised in their use.
- c. If an extension cord is used,
 1. the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
 2. if the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord, and
 3. the longer cord shall be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

Warning

To reduce the risk of fire or electric shock, do not remove any service covers. No user serviceable parts inside. Repair should be done by authorized personnel only.

SAVE THESE INSTRUCTIONS

Caution

This appliance is for household use only. Any servicing other than cleaning and user maintenance should be performed by an authorized service representative:

- Do not immerse base in water or try to disassemble.
- To reduce the risk of fire or electric shock, do not remove the base. No user serviceable parts inside. Repair should be done by authorized service personnel only.
- Keep the cord away from hot parts of the appliance during operation.
- Never clean with scouring powders or hard implements.

NEVER DO (or you will void your warranty protection):

- Never do anything with the appliance which is not described in the User's Manual. In case of doubt, call your dealer.

Your JURA cup warmer

Symbol description	8
Control elements	8
Supplied as standard.....	8
Important information	9
Proper use	9
For your safety	9
1 Setting up and connecting	10
2 Warming cups/glasses.....	11
3 Maintenance	11
4 Environmentally friendly disposal.....	11
5 Technical data	11
6 JURA contact details / legal information	11

Symbol description

Warnings:



CAUTION

Always take note of any information marked with the words CAUTION or WARNING and a warning sign. The signal word WARNING draws your attention to potential serious injury, and the signal word CAUTION to potential minor injury.

Symbols used:



Information and tips to make it even easier to use your cup warmer.



Prompt to take action. This symbol means that you are being prompted to perform some action.

Control elements



- 1 Cup warmer
- 2 On/Off switch 'I/O'
- 3 Cover
- 4 Mains cable

Supplied as standard

- JURA cup warmer
- Instructions for use
- Mains cable

Important information

Proper use

The machine is designed and intended for private domestic use. The machine should be used solely to warm cups and glasses. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

Before using the machine, read these instructions for use thoroughly and completely and comply with the instructions they contain. Keep the instructions for use close to the machine and pass them on to the next user if applicable.

For your safety

Please carefully read and observe the important safety information set out below. To avoid danger of potentially fatal electric shock:

- Use only the original mains cable supplied by JURA.
- Never use a machine which is damaged or has a defective mains cable.
- Never start the machine with wet hands.
- Before starting the machine, ensure that the mains cable is dry.
- Only use the mains cable supplied as standard to connect the

machine to the alternating current grid.

- In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from the power supply and contact JURA service.
- Make sure that the machine and the mains cable are not located close to hot surfaces or naked flames.
- Be careful to ensure that the mains cable is not trapped and does not rub against sharp edges.
- Never open and repair the machine yourself. Do not modify the machine in any way that is not described in the instructions for use. The machine contains live parts.

A damaged machine is not safe and could cause injury or fire. To avoid damage and any associated risk of injury or fire:

- Never allow the mains cable to loosely hang down. The mains cable could pose a tripping hazard or become damaged.
- Protect the machine from environmental influences such as rain, frost and direct sunlight.
- Do not use the machine to store and warm beverages or other types of food.

Cup warmer S

- Do not put any moist or wet cups in the cup warmer.
- Do not immerse the machine, mains cable or connections in water.
- Do not put the machine or any individual parts in the dishwasher.
- Switch the machine off before cleaning work and disconnect the mains plug. Always wipe the machine with a damp cloth rather than a wet one, and protect it from prolonged exposure to water splash. Do not clean the inner side walls.
- Only connect the machine to the mains voltage in accordance with the information on the rating plate. The rating plate is located on the underside of the machine. Further technical data is given in Chapter 5 'Technical data'.
- Switch the machine off if you are going to be absent for a longer period of time and disconnect the mains plug.
- Only operate the machine when supervised.
- Children may not clean or service the machine unless supervised by a responsible person.
- Do not allow children to play with the machine.
- Keep children under the age of eight away from the machine, or supervise them constantly.
- Children aged eight and over may only operate the machine without supervision if they have been instructed in how to use it safely. Children must be able to recognise and understand the potential dangers arising from incorrect use.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the machine safely or
- are inexperienced or lack knowledge

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

1 Setting up and connecting

When setting up your cup warmer, please note the following:

- Set the machine down on a horizontal surface.
- Choose a spot for the machine which is protected against overheating.

WARNING

If the machine is operated with a defective mains cable, there is a danger of potentially fatal electric shock.

- ▶ Never use a machine which has a defective mains cable.
-
- ▶ Connect the mains cable to the machine.
 - ▶ Insert the mains plug into a power socket.

2 Warming cups/glasses

- ▶ Remove the cover.
- ▶ Put the cups and/or glasses in the cup warmer.
- ▶ Put the cover on the cup warmer.
- ▶ Switch the machine on using the On/Off switch.
The machine begins to warm the cups.

i To **switch the machine off**, set the On/Off switch to the 'O' position.

3 Maintenance

- i** Do not use any harsh or abrasive cleaning agents or hard objects for maintenance. This may damage the machine.
 - ▶ Before cleaning the machine, remove the mains plug from the power socket.
 - ▶ Clean the outside of the machine with a soft, damp cloth (e.g. microfibre cloth).
- i** You can purchase JURA microfibre cloths from your specialised dealer.

4 Environmentally friendly disposal

Please dispose of old machines in an environmentally friendly way.

Appropriate disposal of this product:



This symbol indicates that this product must not be disposed of with normal household waste within the entire EU. Recycle the machine in a responsible manner to avoid potential damage to the environment or the health of people due to inappropriate waste disposal and to promote the sustainable recycling of material resources. Please use the return and collection system to return your used machine or get in touch with the specialised dealer from whom you purchased the product. They will be able to submit the product for environmentally friendly recycling.

5 Technical data

Voltage	120 V, 60 Hz (USA/Canada only) 220–240 V, 50/60 Hz (Europe, other countries)
Power	13 W
Conformity symbol	CE
Weight (without cable)	approx. 1.07 kg
Cable length	approx. 1.1 m
Dimensions (W × H × D)	13,9 × 19,9 × 25,8 cm

6 JURA contact details / legal information

JURA Elektroapparate AG
Kaffeeweltstrasse 10
CH-4626 Niederbuchsiten
Tel. +41 (0)62 38 98 233

You can find additional contact details for your country at jura.com.

Directives

The machine complies with the following directives:

- 2011/65/EU (RoHS)
- 2014/35/EU (Low Voltage Directive)
- 2014/30/EU (Electromagnetic Compatibility)
- 2009/125/EC (Ecodesign Directive)

Technical changes

We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colours of the machine. Some details of your machine may vary.